

electronic combination lock

USER INSTRUCTIONS

Note: The Electronic Combination Lock has a 10 button keypad and a # button. The # button is hidden beneath the handle when in the locked position.

The lock requires a 4 digit user code to operate.

The factory preset user code for this lock is:

2244

This number is used to set your personal user code for the **first time only** (see instructions below)

Penalty time

- Entering three incorrect codes will cause the lock to shutdown for 10 seconds.

SETTING YOUR PERSONAL USER CODE FOR THE FIRST TIME

This needs to be done while the lock is in the **open position**.

If the lock is closed, input the factory preset user code **2244** to open it, then:

Press: #

Enter the factory preset user code: **2244**

Enter your personal user code: _ _ _ _ (4 digits)

Enter your personal user code again: _ _ _ _

Lock has now been set to your personal user code.

CHANGING YOUR USER CODE

This needs to be done while the lock is in the **open position**.

If the lock is closed, input your personal user code _ _ _ _ to open it, then:

Press: #

Enter your personal user code _ _ _ _

Enter your **NEW** personal user code: _ _ _ _ (4 digits)

Enter your **NEW** personal user code again: _ _ _ _

Lock has now been set to your NEW personal user code.

DELETING REDUNDANT USER CODE READY FOR NEW USER CODE **SUPERVISOR OPERATION ONLY**

This needs to be done while the lock is in the **open position**.

If the lock is closed, input the Security Master Code to open it (for Security Master Code see separate sheet) then:

Press: #

Enter Security Master Code

Enter **02** followed by factory preset user code: **2244**

The lock is now set to factory default and is ready for new user, see "Setting your personal user code" above.

USER INFORMATION

Battery Power

The Electronic Combination Lock should provide well in excess of 15,000 openings, of 4 seconds each, from 2 x AAA 1.5v cells.

Low battery

When the battery power is low the Red LED will flash 3 times before the Blue ● LED flashes to signal acceptance of the code. Batteries should be changed as soon as this happens. The lock will operate for 100 times with low battery.

Fit new batteries by removing the upper fixing bolt and swinging the lock down. Refit the lock.

LOCK PICTURED IN LOCKED/CLOSED POSITION



For further information please contact your probe distributor