

**Tools required for assembly:**

- Adjustable spanner
- Flat head screw driver

**11 Seed & 7 Seed Pod**

This illustrated procedure is for an 11 Seed Locker Pod. Use the same steps for a 7 Seed Locker Pod.


- Step 1 Choose desired location for the Locker Pod, it may help to mark out a temporary  $\varnothing 1020\text{mm}$  (3'4") guide area on the floor as it will be difficult to move once assembled.
- Step 2 Position first Locker Seed in its desired location (**fig 1**).
- Step 3 Position second Locker Seed next to first (**fig 2**). Using pre drilled holes, bolt the lockers together at the top and bottom (front only) (**fig 3**).
- Step 4 Continue with each additional locker, as step 3, until you complete the Locker Pod. Bolt the first and last placed Locker Seeds together to link the circle.
- Step 5 To fix Standard Infill Cap remove backing from the attached double sided tape, position over centre of the Locker Pod and press firmly in place (**fig 4**).

**OPTIONAL SLOPING CANOPY**


- Step 6 To fix Sloping Canopy remove backing from the attached double sided tape, position on top of the Locker Pod and press firmly in place. Assistance will be required to lower in place.

If you find difficulty in assembly please contact your Probe distributor (see below).


**fig 1** Chosen location

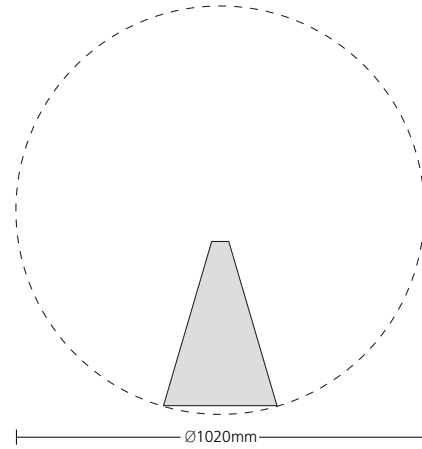


**fig 2** Additional Locker Seeds

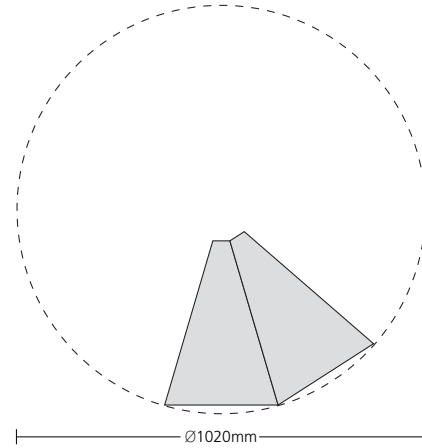

**fig 3** Locker Seed connection

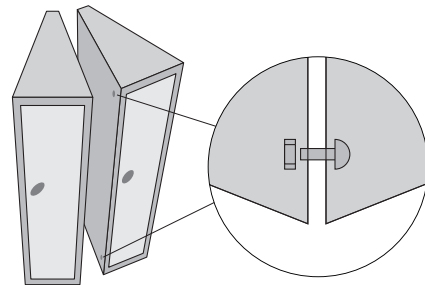

**fig 4** Standard Infill Cap

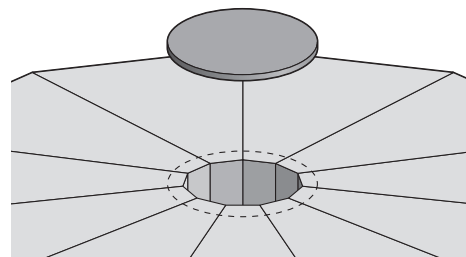

**LOCKER POD® NOTES** All sizes contained within this leaflet are nominal. All Lockers are manufactured ready for simple connection. We reserve the right to alter specifications without prior consent.